


DIP SWITCH SETTING

(After changing the dip code, press "reset" or power-on again)

PIN 1,2,3	OFF	BMW (F underpan)	8.8/10.25 inch
PIN 1,3	ON	BMW (E90/E92 underpan)	8.8/10.25 inch
PIN 2,3	ON	BMW MINI 6.5 inch	
PIN 1	ON	BMW 6.5 inch	
PIN 2	ON	BMW 6.5 inch with special screen parameters	
PIN 3	ON	BMW (E70 underpan)	8.8/10.25 inch
PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic	
PIN 5	OFF/ON	NG/NG	
PIN 6	OFF/ON	NG/NG	
PIN 7	OFF/ON	NG/NG	
PIN 8	OFF/ON	After market rear view camera/Original rear view camera	

Reset Dip Switch LED

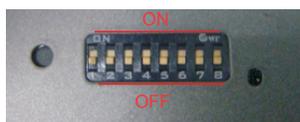

REMARK:

Please stay in the AUX Interface when opening the CARPLAY Interface

- 1) Long press and hold "MENU" button to switch MENU; long press and hold "BACK" button, exit the switch MENU.
- 2) Short press "MENU" button to open "Siri".
- 3) iDrive knob to control up/down/right/left/ok.

- 1) Long press and hold the "MENU" Button to enter the Interface, long press the "BACK" Button to exit.
- 2) Short press "MENU" Button to open "Siri".
- 3) iDrive to control up/down/right/left/ok.